



**MINHA MARCA DE
ÓRGÃO ELETRÔNICO**

MANUAL DA PLACA TY2695D

A Placa TY2695D conta com a mais nova tecnologia para órgãos eletrônicos trazendo ainda mais qualidade e praticidade para o músico, atendendo todos os requisitos e tendência do mercado atual para quem vai criar sua marca de órgão e para quem toca.

RECURSOS:

Teclado Superior: 5 Timbres de Órgãos + **128 Timbres Dual Voice** + **4 Efeitos:** Vibrato, Sustain, Reverb, Chorus + Oitava

Teclado Inferior: 5 Timbres de Órgãos + **128 Timbres Single Voice** + **3 Efeitos:** Vibrato, Sustain, Reverb

Timbres da Pedaleira: 4 Timbres + **3 Efeitos:** Vibrato, Sustain, Reverb

Ritmos: 12 Ritmos

Polifonia: 14 Canais por Teclado

Volume Individual: Controle de volume Individual para cada Teclado e Pedaleira.

Tela Display LCD 16X2

TIMBRES:

Timbres dos Teclados: Órgão 1, Órgão 2, Órgão 3, Órgão 4, Órgão 5

Timbres da Pedaleira: Baixo Acustivo, Pipe Órgão, Sax Baritono, Tuba

Dual Voice Teclado Superior & Single Voice Teclado Inferior:


PC	GENERAL MIDI	PC	GENERAL MIDI	PC	GENERAL MIDI	PC	GENERAL MIDI
1	(Grand) Piano 1	33	Acoustic Bass	65	Soprano Sax	97	FX 1 (rain)
2	(Bright) Piano 2	34	Finger Bass	66	Alto Sax	98	FX 2 (soundtrack)
3	(El. Grd) Piano 3	35	Picked Bass	67	Tenor Sax	99	FX 3 (crystal)
4	Honky-tonk Piano	36	Fretless Bass	68	Baritone Sax	100	FX4 (atmosphere)
5	El. Piano 1	37	Slap Bass 1	69	Oboe	101	FX 5 (brightness)
6	El. Piano 2	38	Slap Bass 2	70	English Horn	102	FX 6 (goblins)
7	Harpsichord	39	Synth Bass 1	71	Bassoon	103	FX 7 (echoes)
8	Clavi	40	Synth Bass 2	72	Clarinet	104	FX 8 (sci-fi)
9	Celesta	41	Violin	73	Piccolo	105	Sitar
10	Glockenspiel	42	Viola	74	Flute	106	Banjo
11	Music Box	43	Cello	75	Recorder	107	Shamisen
12	Vibraphone	44	Contrabass	76	Pan Flute	108	Koto
13	Marimba	45	Tremolo Strings	77	Blown Bottle	109	Kalimba
14	Xylophone	46	Pizzicato Strings	78	Shakuhachi	110	Bag pipe
15	Tubular Bells	47	Orchestral Harp	79	Whistle	111	Fiddle
16	Santur	48	Timpani	80	Ocarina	112	Shanai
17	Drawbar Organ	49	String Ensemble 1	81	Lead 1 (square)	113	Tinkle Bell
18	Percussive Organ	50	String Ensemble 2	82	Lead 2 (sawtooth)	114	Agogo
19	Rock Organ	51	Synth Strings 1	83	Lead 3 (calliope)	115	Steel Drums
20	Church Organ	52	Synth Strings 2	84	Lead 4 (chiff)	116	Woodblock
21	Reed Organ	53	Choir Aahs	85	Lead 5 (charang)	117	Taiko Drum
22	Accordion (french)	54	Voice Oohs	86	Lead 6 (voice)	118	Melodic Tom
23	Harmonica	55	Synth Voice	87	Lead 7 (fifths)	119	Synth Drum
24	Tango Accordion	56	Orchestra Hit	88	Lead8 (bass+lead)	120	Reverse Cymbal
25	Ac. Guitar (nylon)	57	Trumpet	89	Pad 1 (fantasia)	121	Gt. Fret Noise
26	Ac. Guitar (steel)	58	Trombone	90	Pad 2 (warm)	122	Breath Noise
27	El. Guitar (jazz)	59	Tuba	91	Pad 3 (polysynth)	123	Seashore
28	El. Guitar (clean)	60	Muted Trumpet	92	Pad 4 (choir)	124	Bird Tweet
29	El. Guitar (muted)	61	French Horn	93	Pad 5 (bowed)	125	Teleph. Ring
30	Overdriven Guitar	62	Brass Section	94	Pad 6 (metallic)	126	Helicopter
31	Distortion Guitar	63	Synth Brass 1	95	Pad 7 (halo)	127	Applause
32	Guitar harmonics	64	Synth Brass 2	96	Pad 8 (sweep)	128	Gunshot

FUNCIONALIDADES:

TECLADOS:

Timbres de Órgãos dos Teclados Superior & Inferior: (As Mesma funcionalidades se repetem nos dois teclados exceto a função de uma oitava acima no teclado superior)

5 Timbres de Órgãos

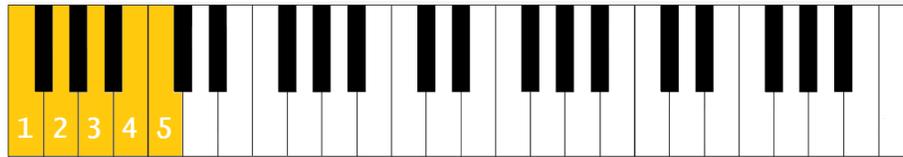

Órgão 1: Menu pressionado + Tecla F2


Órgão 2: Menu pressionado + Tecla G2

Órgão 3: Menu pressionado + Tecla A2

Órgão 4: Menu pressionado + Tecla B2

Órgão 5: Menu pressionado + Tecla C3

Efeitos dos Teclados Superior & Inferior: (As Mesma funcionalidades se repetem nos dois teclados exceto a função de uma oitava acima no teclado superior)

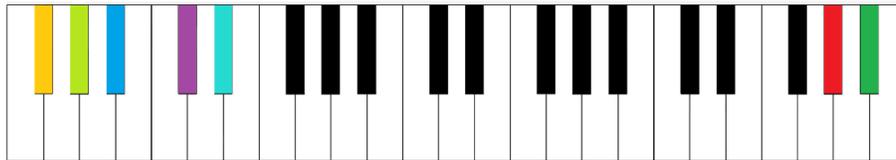

EFEITOS

- Vibrato
- Sustain
- Reverb
- Chorus
- Oitava Acima

VOLUME

- Diminuir
- Aumentar

Vibrato: Menu pressionado + Tecla F#2

Sustain: Menu pressionado + Tecla G#2

Reverb: Menu pressionado + Tecla A#2

Chorus: Menu pressionado + Tecla C#3


*Oitavado (**Teclado Superior**): Menu pressionado + Tecla D#3

Volume Individual dos dois Teclados: G#5 Diminuir | A#5 Para Aumentar

DUAL VOICE - TECLADO SUPERIOR:

Dual Voice do Teclado Superior: (Funcionalidades de voz dupla no teclado superior)

Dual Voice 128 SONS

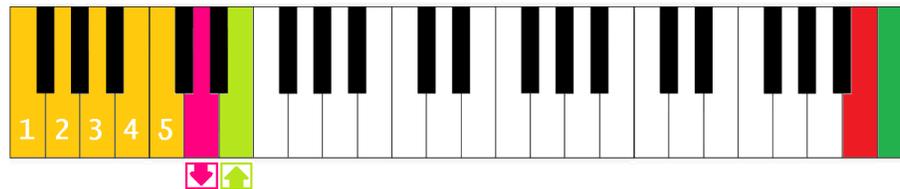

DUAL VOICE

Descer
Subir

VOLUME

Diminuir
Aumentar


128 Timbres (Dual Voice): Menu pressionado + **D3 Descer** | **E3 Para Subir**

Volume Individual Dual Voice: Menu pressionado + **B5 Diminuir** | **C6 Aumentar**

SINGLE VOICE - TECLADO INFERIOR:

Single Voice do Teclado Inferior: (Funcionalidade de voz única no teclado inferior)

Single Voice 128 SONS

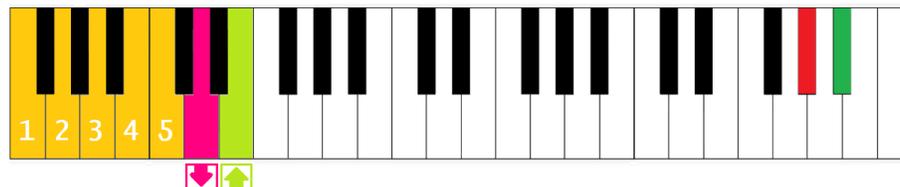

SINGLE VOICE

Descer
Subir

VOLUME

Diminuir
Aumentar


128 Timbres (Single Voice): Menu pressionado + **D3 Descer** | **E3 Para Subir**

Volume Individual do Teclado Inferior: Menu pressionado + **G#5 Diminuir** | **A#5 Aumentar**

PC	GENERAL MIDI	PC	GENERAL MIDI	PC	GENERAL MIDI	PC	GENERAL MIDI
1	(Grand) Piano 1	33	Acoustic Bass	65	Soprano Sax	97	FX 1 (rain)
2	(Bright) Piano 2	34	Finger Bass	66	Alto Sax	98	FX 2 (soundtrack)
3	(El. Grd) Piano 3	35	Picked Bass	67	Tenor Sax	99	FX 3 (crystal)
4	Honky-tonk Piano	36	Fretless Bass	68	Baritone Sax	100	FX4 (atmosphere)
5	El. Piano 1	37	Slap Bass 1	69	Oboe	101	FX 5 (brightness)
6	El. Piano 2	38	Slap Bass 2	70	English Horn	102	FX 6 (goblins)
7	Harpsichord	39	Synth Bass 1	71	Bassoon	103	FX 7 (echoes)
8	Clavi	40	Synth Bass 2	72	Clarinet	104	FX 8 (sci-fi)
9	Celesta	41	Violin	73	Piccolo	105	Sitar
10	Glockenspiel	42	Viola	74	Flute	106	Banjo
11	Music Box	43	Cello	75	Recorder	107	Shamisen
12	Vibraphone	44	Contrabass	76	Pan Flute	108	Koto
13	Marimba	45	Tremolo Strings	77	Blown Bottle	109	Kalimba
14	Xylophone	46	Pizzicato Strings	78	Shakuhachi	110	Bag pipe
15	Tubular Bells	47	Orchestral Harp	79	Whistle	111	Fiddle
16	Santur	48	Timpani	80	Ocarina	112	Shanai
17	Drawbar Organ	49	String Ensemble 1	81	Lead 1 (square)	113	Tinkle Bell
18	Percussive Organ	50	String Ensemble 2	82	Lead 2 (sawtooth)	114	Agogo
19	Rock Organ	51	Synth Strings 1	83	Lead 3 (calliope)	115	Steel Drums
20	Church Organ	52	Synth Strings 2	84	Lead 4 (chiff)	116	Woodblock
21	Reed Organ	53	Choir Aahs	85	Lead 5 (charang)	117	Taiko Drum
22	Accordion (french)	54	Voice Oohs	86	Lead 6 (voice)	118	Melodic Tom
23	Harmonica	55	Synth Voice	87	Lead 7 (fifths)	119	Synth Drum
24	Tango Accordion	56	Orchestra Hit	88	Lead8 (bass+lead)	120	Reverse Cymbal
25	Ac. Guitar (nylon)	57	Trumpet	89	Pad 1 (fantasia)	121	Gt. Fret Noise
26	Ac. Guitar (steel)	58	Trombone	90	Pad 2 (warm)	122	Breath Noise
27	El. Guitar (jazz)	59	Tuba	91	Pad 3 (polysynth)	123	Seashore
28	El. Guitar (clean)	60	Muted Trumpet	92	Pad 4 (choir)	124	Bird Tweet
29	El. Guitar (muted)	61	French Horn	93	Pad 5 (bowed)	125	Teleph. Ring
30	Overdriven Guitar	62	Brass Section	94	Pad 6 (metallic)	126	Helicopter
31	Distortion Guitar	63	Synth Brass 1	95	Pad 7 (halo)	127	Applause
32	Guitar harmonics	64	Synth Brass 2	96	Pad 8 (sweep)	128	Gunshot

PEDALEIRA:

Timbres:

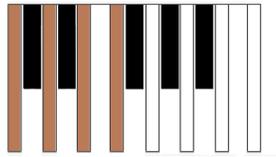

TIMBRES

 4 Timbres


Baixo Acústico: Menu pressionado + Nota C

Pipe Organ: Menu pressionado + Nota D

Sax Barítono: Menu pressionado + Nota E

Tuba: Menu pressionado + Nota F

Efeitos:

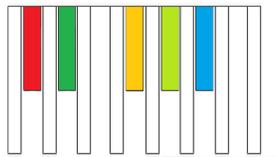

EFEITOS

 **Vibrato**
 **Sustain**
 **Reverb**

VOLUME

 **Diminuir**
 **Aumentar**

Vibrato: Menu pressionado + Nota F#


Sustain: Menu pressionado + Nota G#

Reverb: Menu pressionado + Nota A#

Volume da Pedaleira: Menu pressionado + **C# Diminuir** | **D# Para Aumentar**

RITMOS:

Ritmos: (As funcionalidades do ritmo é somente para o teclado inferior)

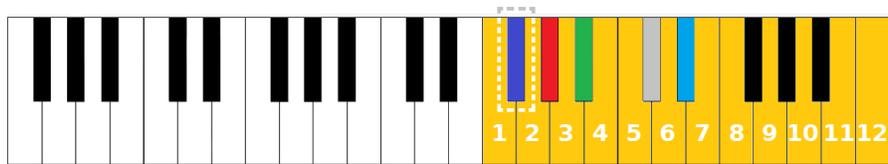

RITMOS

- Start
- 12 Ritmos

VOLUME

- Diminuir
- Aumentar

TEMPO

- Diminuir
- Aumentar

Bossa Nova: Menu pressionado + Tecla F4

Rock: Menu pressionado + Tecla G4

Valsa: Menu pressionado + Tecla A4

Rock Roll: Menu pressionado + Tecla B4

Tango: Menu pressionado + Tecla C5

Forro: Menu pressionado + Tecla D5

Baião: Menu pressionado + Tecla E5

Samba: Menu pressionado + Tecla F5

Bolero: Menu pressionado + Tecla G5

Dance: Menu pressionado + Tecla A5

Pop Rock: Menu pressionado + Tecla B5

Funk: Menu pressionado + Tecla C6

Opções (As funcionalidade do ritmo é somente para o teclado inferior)

Start: Menu pressionado + F#4 Liga e Desliga

Volume: Menu pressionado + G#4 Diminuir | A#4 Para Aumentar

Tempo: Menu pressionado + C#5 Diminuir | D#5 Para Aumentar

OPÇÕES PARA FABRICANTES:

Chave Principal (MENU): O Fabricante tem a opção de colocar a chave principal (Menu) no pedal de expressão com opção do músico mudar de timbre e colocar efeitos sem tirar a mão dos teclados, criando uma experiência única para quem toca.

Ainda tem alguma Dúvida? Entre em Contato conosco pelo número (11) 9 5348-1482

Tecsony.com - Projetos Eletrônicos para Órgãos Eletrônicos